



Fitting Guide for Cordless Wooden Blinds


Fitting into a standard window

Fitting the brackets

The brackets offer three methods of installation:


Top fixing

Where the brackets are screwed into the lintel (or 'ceiling' of the recess)

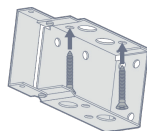


Side fixing

Where the brackets are screwed into the side walls of the recess.

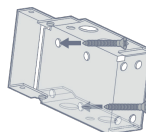

Face fixing

Where the brackets are screwed into a facing surface (a wall or window frame)

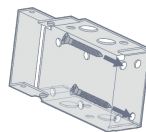


Support brackets

Wider blinds will be supplied with support brackets. These should be positioned towards the centre of the window area in-line with the box brackets. Make sure that the position of the support bracket is clear of any cords coming out of the headrail. Support brackets can be top-fixed or face-fixed (see illustrations opposite).



Top fixing

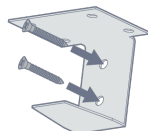


Face fixing

Fitting the blind

If recess fitting, complete step 1 of fitting the pelmet first (see below).

Lift the blind to the window and slot the headrail into the open brackets.

Swing the hinged section of the bracket to close and press firmly until it locks.

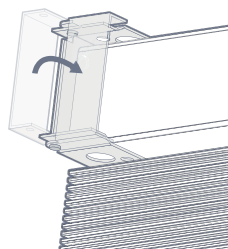

Fitting the Tilt Wand


Hook the wand onto the plastic clip on the left side of the headrail before proceeding to the next steps for attaching the pelmet.

Fitting the pelmet

Attach the winged clips to the rear of the pelmet and hook the serrated pelmet clips onto the headrail (if installing the blind within a recess, this should be done before step 2) so that both the serrated clips and winged clips are in corresponding positions on the headrail and pelmet. Then align the two clips with each other and apply gentle pressure to the front of the pelmet, directly over the clips to click them together.

Step 1

Hook the valance clips evenly along the length of the headrail, prior to installing the blind in the brackets.

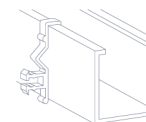


Step 2

Engage the top leg of the valance clip into the groove on the back of the valance. Then push the valance towards the headrail to engage the bottom leg.



Pelmets for exact fitting

If you've ordered 'exact fitting' then the pelmet will be sent wider and mitred at the ends, with additional end returns to cover the brackets. Use the 'L' shaped plastic brackets from your fittings pack to attach the side returns to the pelmet.

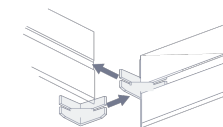

Operation

To operate the blind, use both hands to raise or lower the bottom rail evenly, ensuring the blind is fully supported at all times. To adjust the angle of the slats, rotate the tilt wand gently until the desired position is reached.

WARNING - CHILD SAFETY (BS EN 13120)

This blind is designed with a cordless operating system and does not use operating cords or chains.

The slats are tilted using the operating wand. To raise or lower the blind, use the bottom rail by hand.

As there are no operating cords or chains, this blind is safe by design in relation to the strangulation hazards associated with corded blind operating systems, and no supplementary cord or chain safety device is required.



make it safe

Enjoy your newly installed blind from Blinds 4 You !

We are here to help you enjoy your new blinds and you will find lots of other useful information on our website. If you need to contact us, please visit www.Blinds4You.co.uk/contactus for more details.



Love your new blind, show us!

Post a picture of your new blinds on Instagram and tag us - we'd love to see how they look in your home! Scan the QR code to find us on Instagram.

Tag us: @blinds4you.co.uk