

Blinds4You


Measuring Guide for No Drill Roller Blinds

With Blinds4You, measuring for your beautiful new blind is easy. Just follow this step-by-step guide, taking care to double check as you go and look out for some handy tips to help you save time too. Below is a handy guide for measuring for No Drill Roller blinds.

Recess Fitting Only

No Drill Blinds require no drilling or screwing with a friction based installation and are only suitable for installation inside the window recess.

recess checking tips

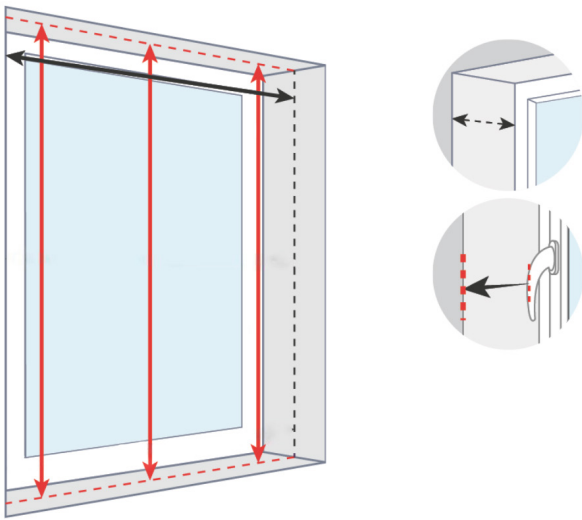

Depth needed = 60mm

Measure the full width and height of the recess – leave deductions to our experts. You will get a blind ready to fit inside the recess perfectly.

- **For the width**, measure across the top of the recess between the two points where the blind will sit.
- **For the drop**, measure at 3 points and use the **smallest measurements you've taken**
- **Don't make any deductions**; we will do that for you
- **Use a metal tape measure**; cloth ones can stretch and give you inaccurate measurement


Handy Tip: Double check the depth of your recess (see recess checking tips above).

Is it deep enough to take the blind?


Are there any obstructions like handles or ventilation? Depth needed for standard Roller blinds = 60mm



No Drill Control Ends

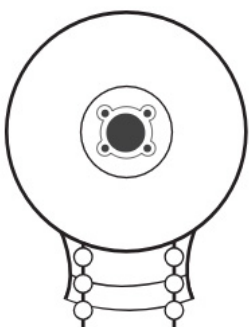


Control Drive

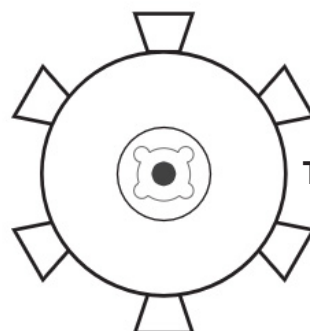

Tightener

Important Notes

Fitting inside a part-tiled recess (also for picture rails, skirting boards) will likely reduce the width available compared to a standard recess.

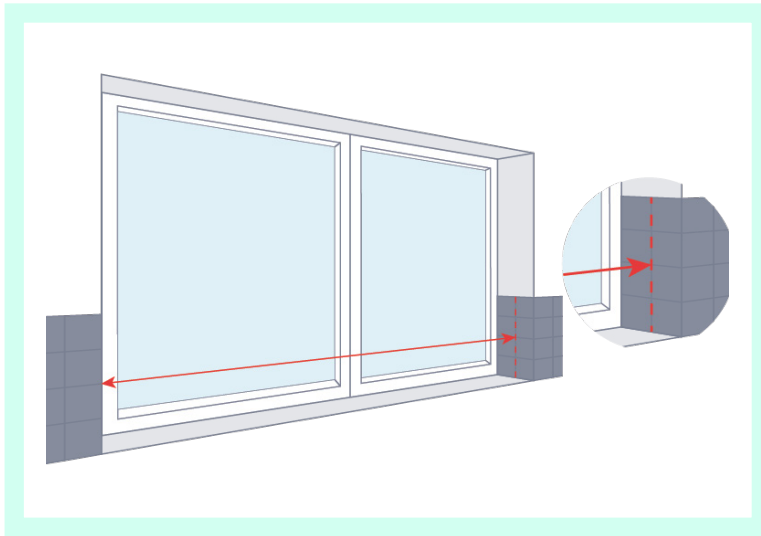

Measure the width between the tiles and the top of your recess for your width. If the difference between these 2 measurements is less than 20mm you can use the top measurement.

If greater than 20mm, the fabric will hit the tiles and you will need to order standard rollers to top fix or face fix. We do not recommend No Drill Rollers in this instance.

Use this method if you have a skirting board, picture rail or something else in the inside of the recess.

Once you have noted your measurements, enter the sizes into www.blinds4you.co.uk/collections/roller-blinds and choose **No Drill** option. We will make your new blind to your sizes and send them out to you ready to fit.