

Blinds4You

Measuring Guide for Perfect Fit Venetian blinds

With Blinds4You, measuring for your beautiful new blind is easy. Just follow this step-by-step guide, taking care to double check as you go along. Below is a handy guide for measuring for Perfect Fit Venetian blinds.

This guide works for:

- Perfect Fit Venetian blinds
- Perfect Fit Pleated blinds


Perfect Fit blinds

Designed for modern uPVC windows and doors with rubber beading, Perfect Fit blinds are simple to measure for.

Just grab your pen, notepad, metal measure tape and a bank card and follow these steps.


Step 1

Measure the distance between the edge of the window beading and any obstacles such as handles. This needs to be more than 6mm.

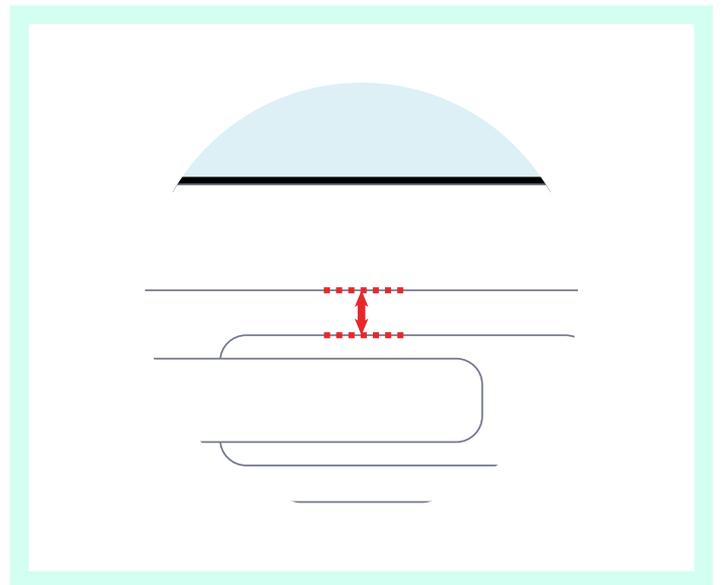


Step 2

Measure the rubber beading length it extends into the glass area – this needs to be less than 6mm.

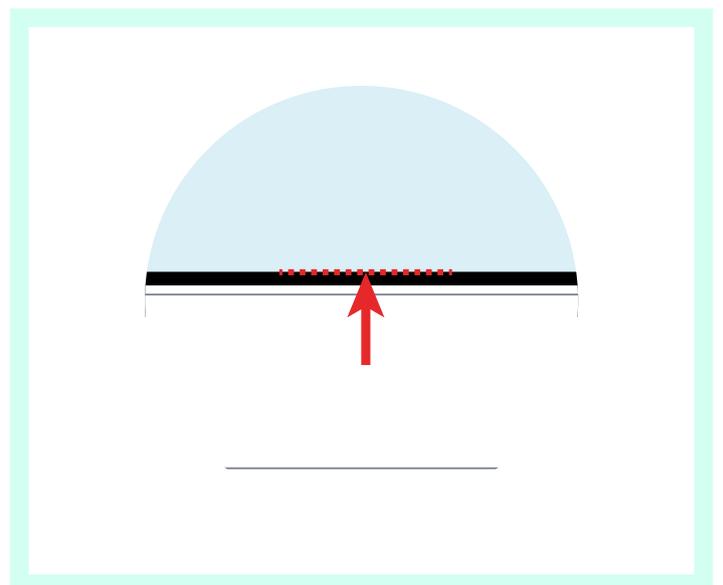


Step 3

To measure the depth of the window from glass to beading, place your bank card over the corner of the window/door frame. Measure the distance from glass to card. Typically the bead depth is between 18-24mm.

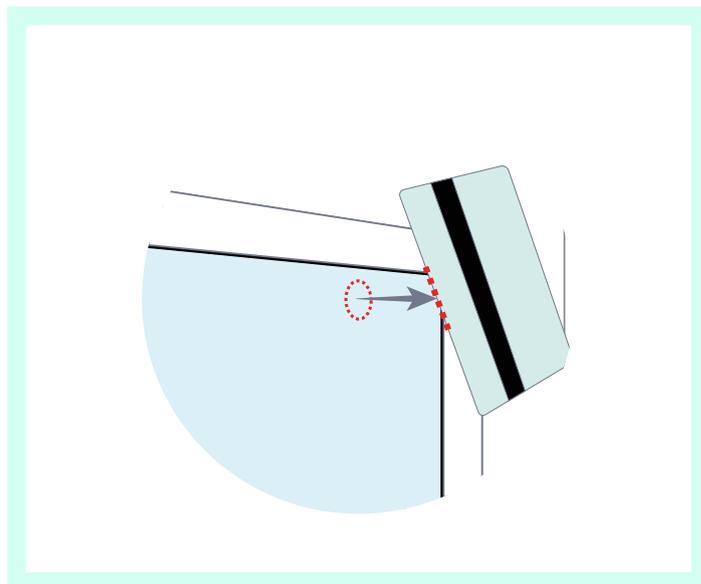

Step 4

Measure the width and drop of the visible glass area – that is from where the glass meets the rubber beading to the other side. Do this in three points (top, middle, bottom for Width; Left, Right, Centre for Drop) and take the shortest distance for each.

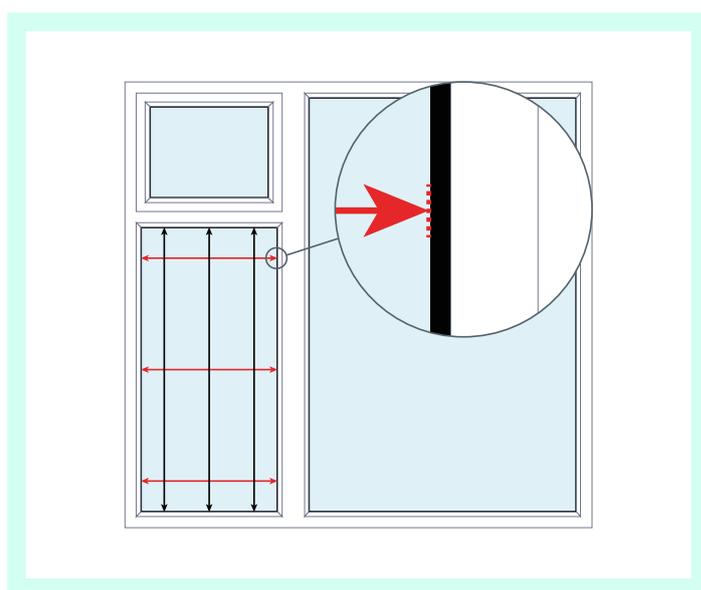

Once you have noted your measurements, enter the sizes into www.blinds4you.co.uk/collections/perfectfit-blinds and choose the Exact fitting option. We will make your new blind to your sizes without deductions and send them out to you ready to fit.